



# Datec Flowchart based on software version V2-52 FR

©Per Magnus Pedersen | December 8, 2021

PRESS "MENU"

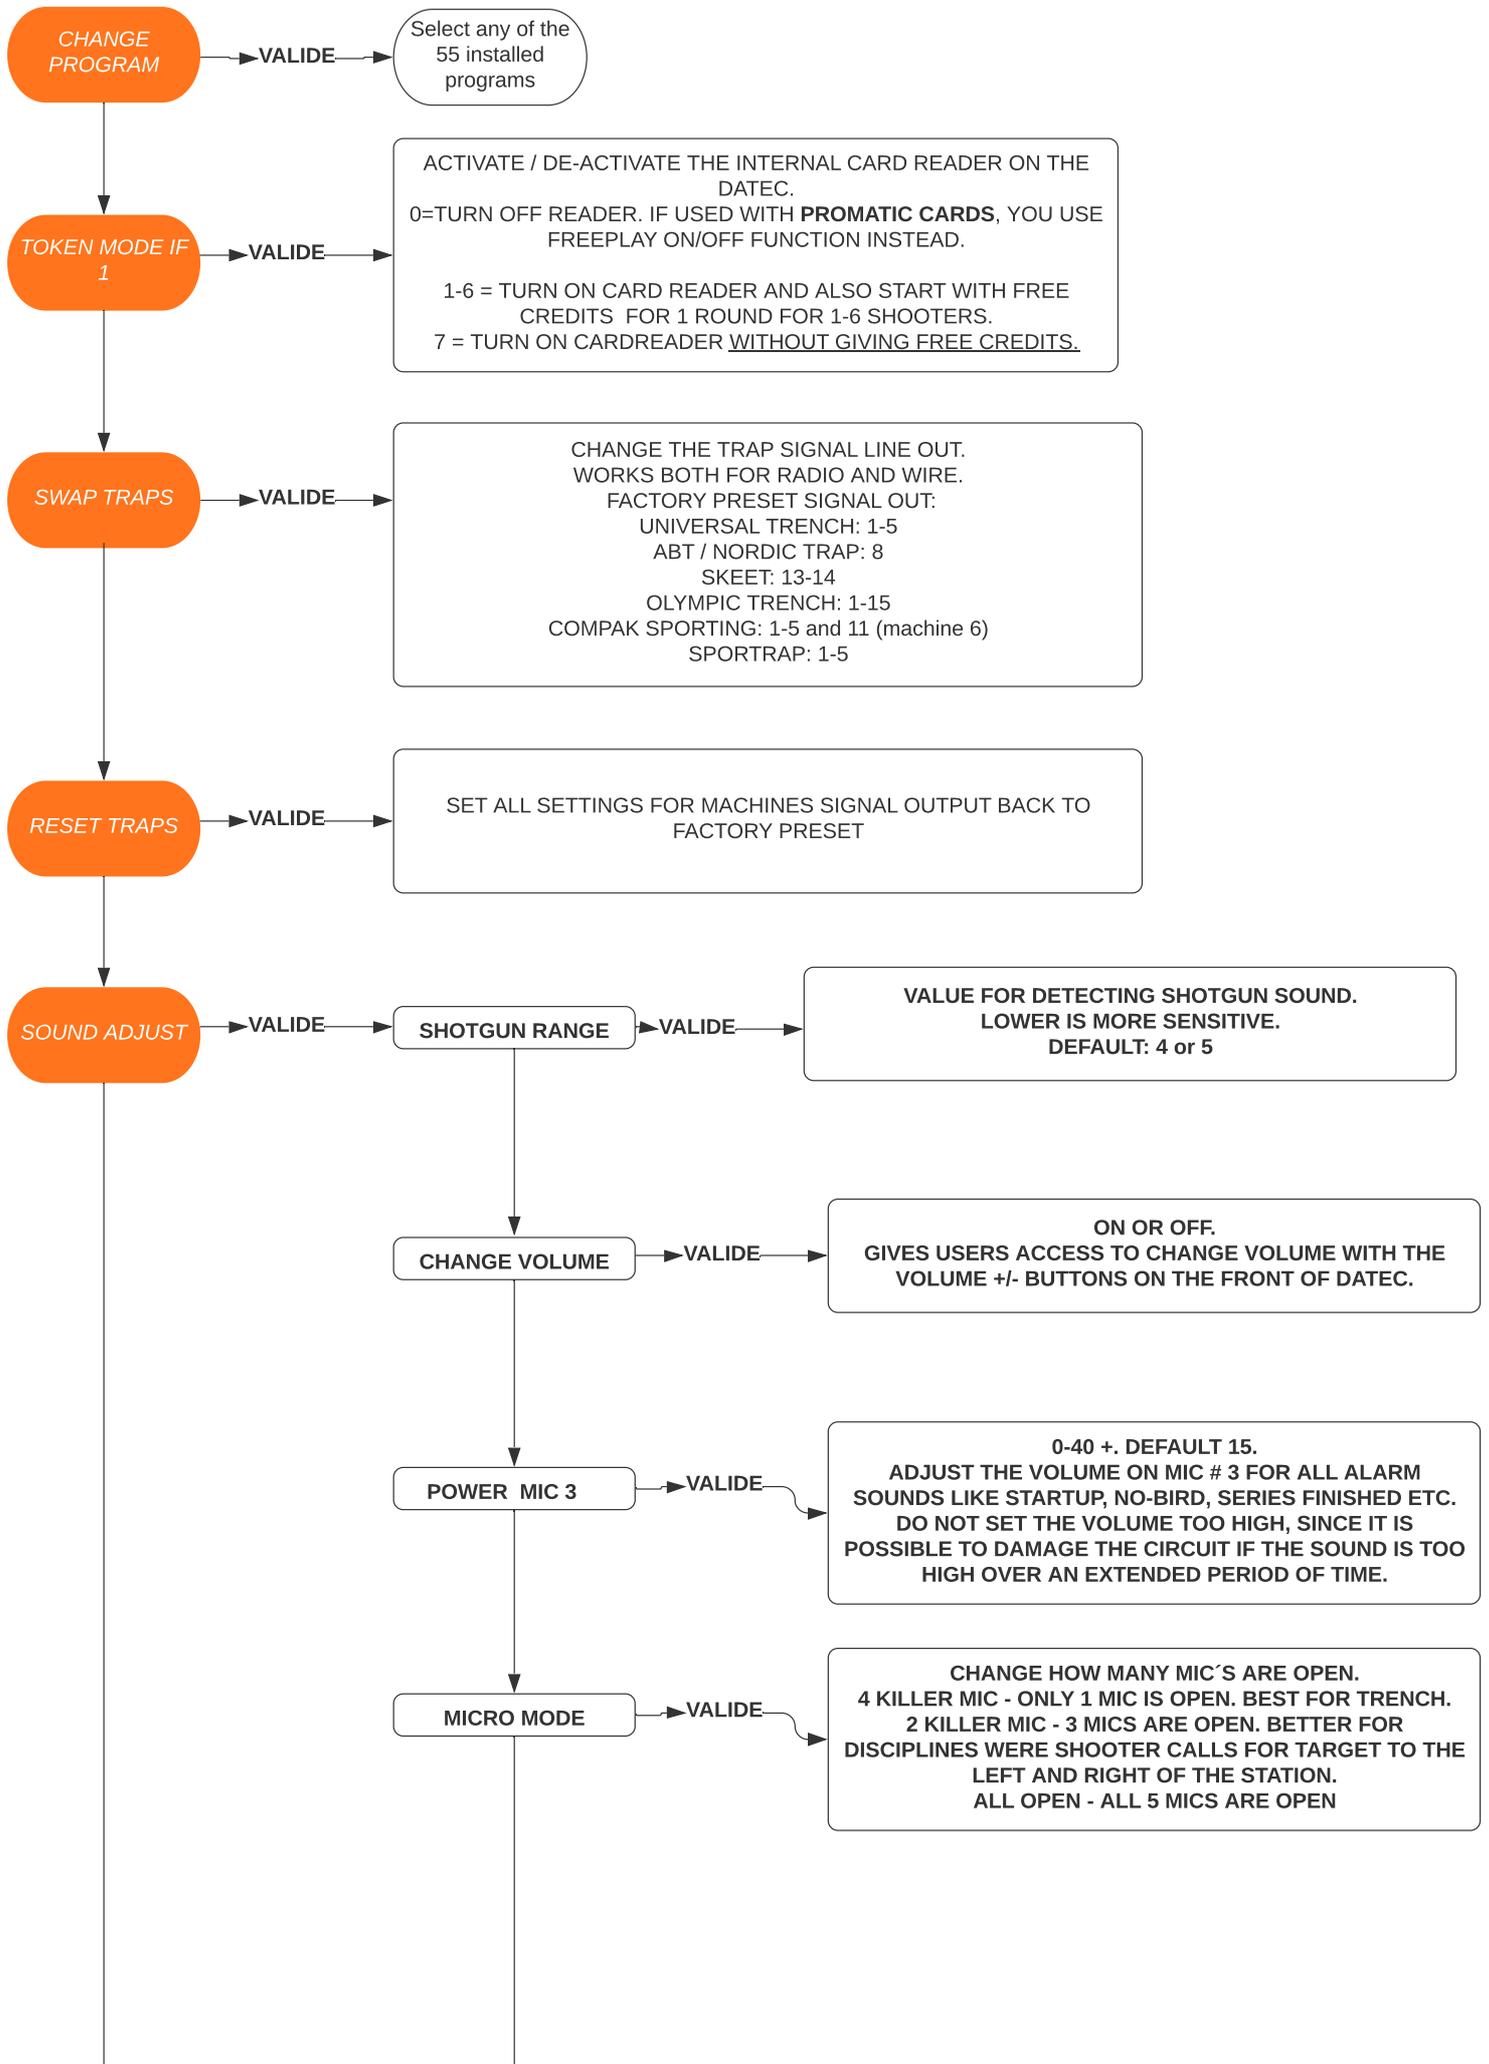

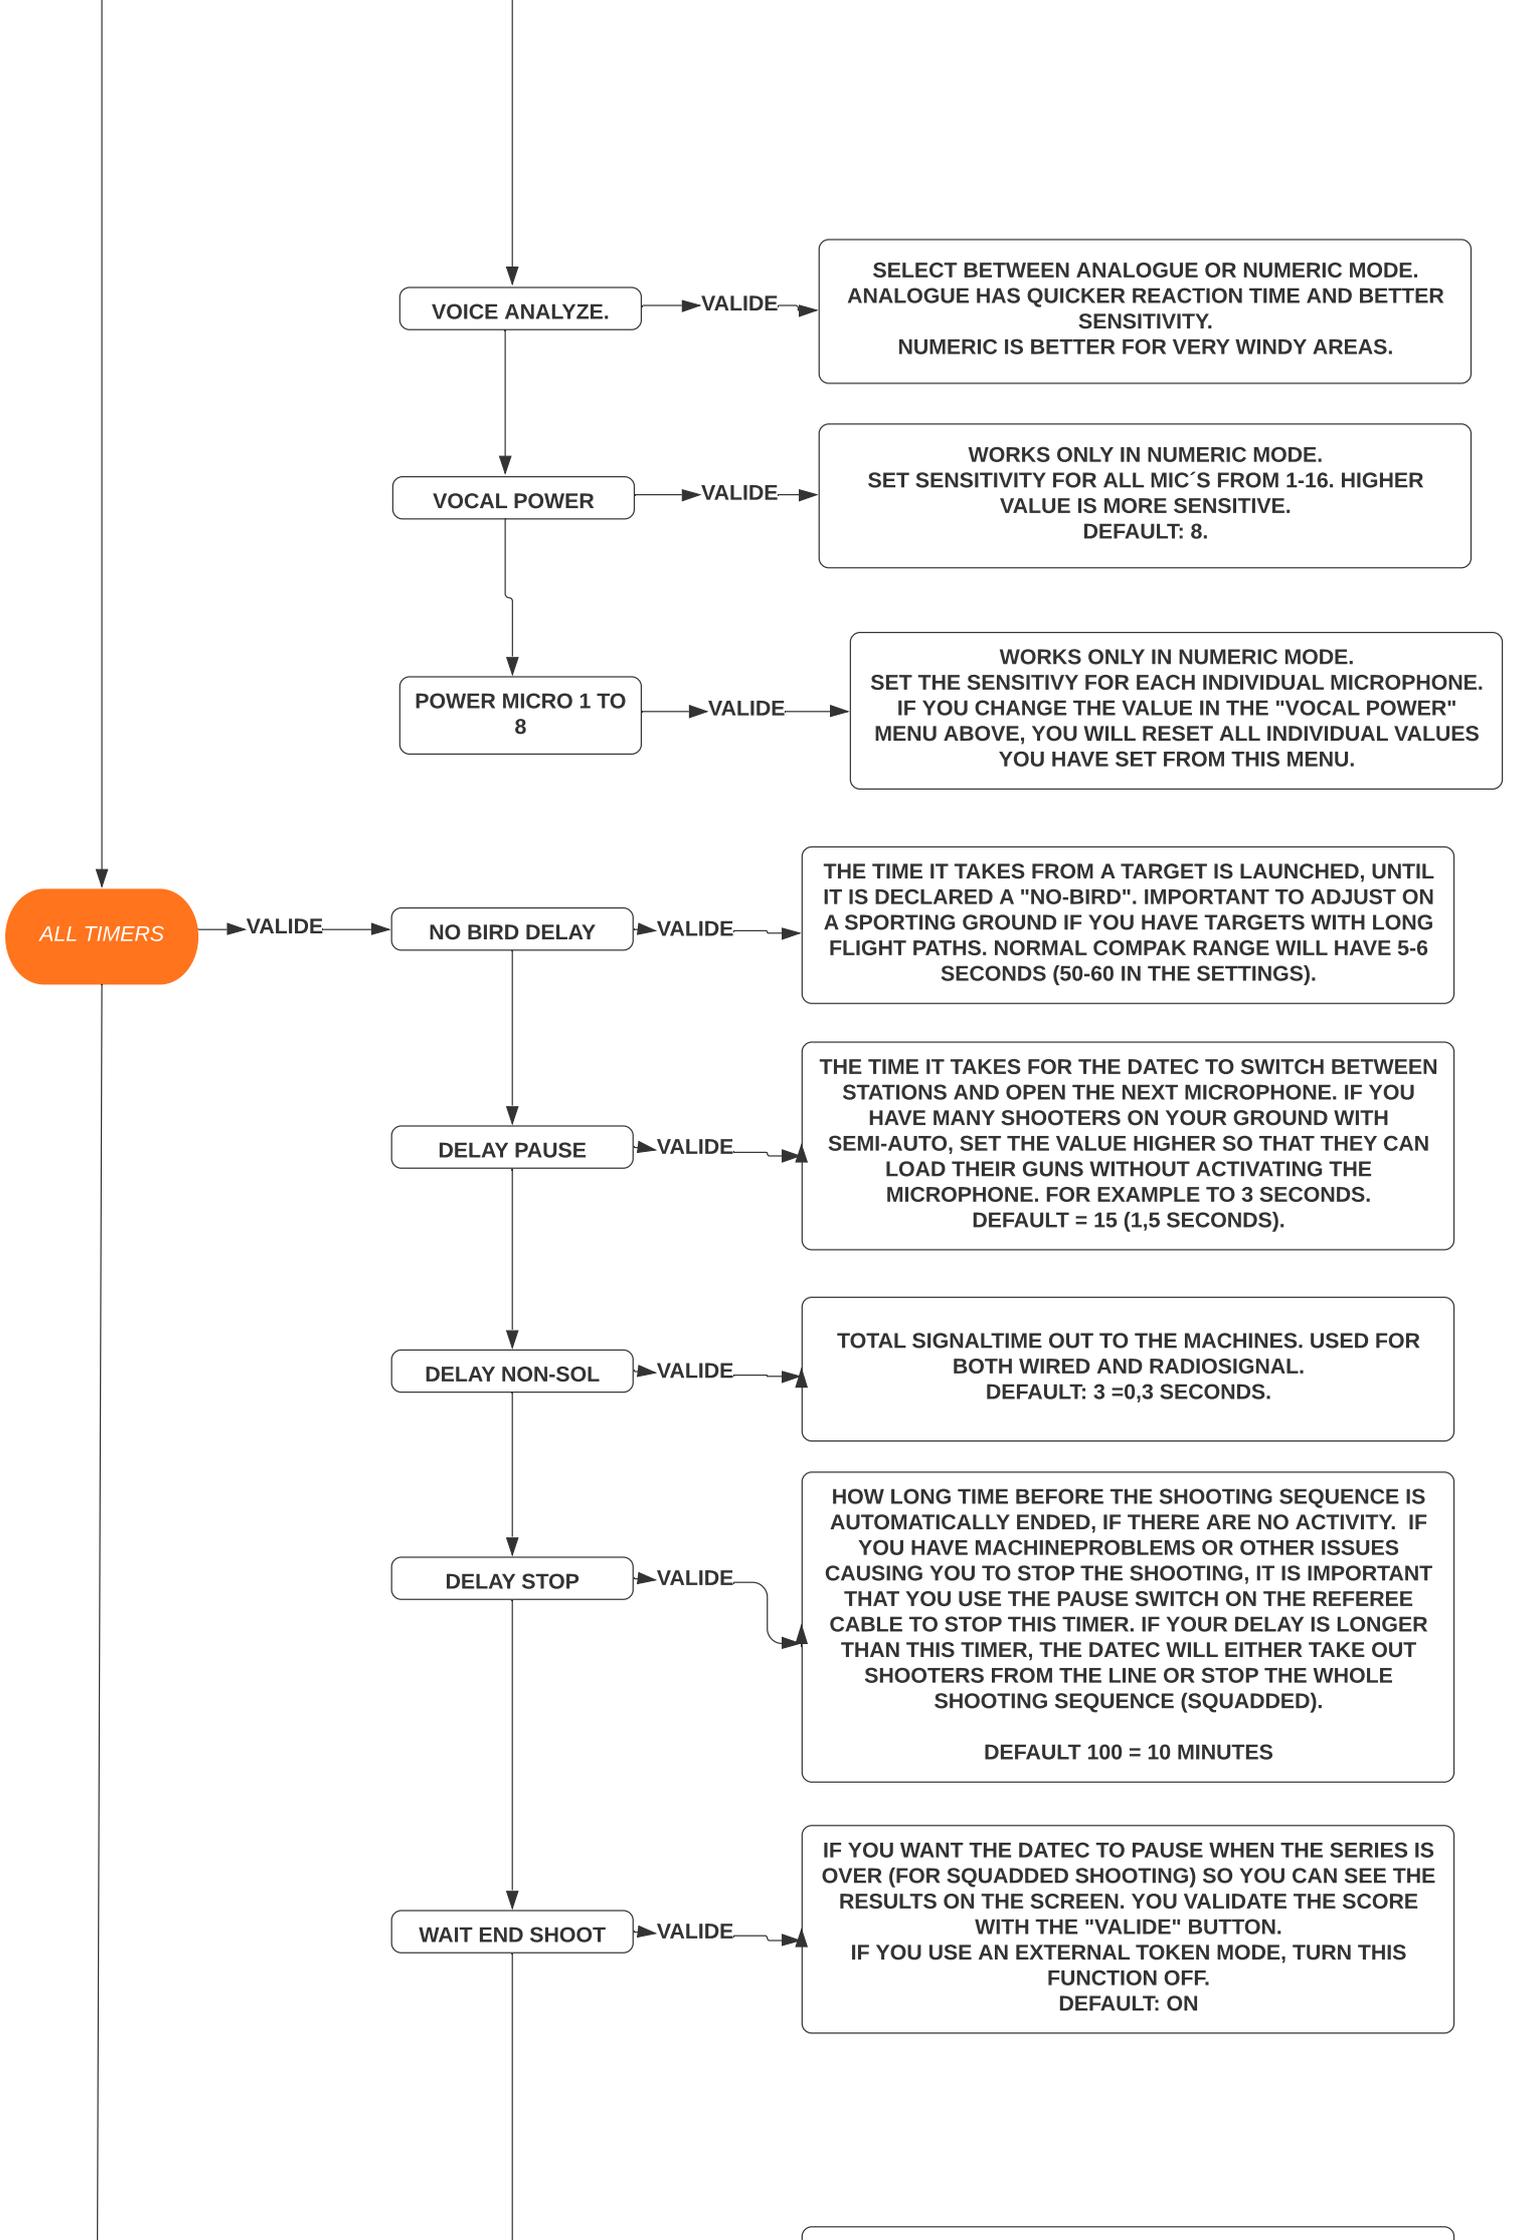

**RADIO OPTIONS**

FIRE DELAY

VALIDE

SETS THE MAX TIMER. THIS WILL BE DIFFERENT FROM TRAP TO SKEET AND COMPAK. FOR NORDIC TRAP AND SKEET IT IS VARIABLE. FOR UT/OT/COMPAK IT IS FIXED.  
SKEET=30  
COMPAK=2  
TRENCH=0

TIME END PO

VALIDE

SETS THE TIME FOR HOW LONG IT TAKES FOR THE DATEC TO INSERT A NEW SHOOTER INTO THE LINE AFTER SHOOTER IN STATION 5 IS FINISHED.  
DEFAULT = 5 (SECONDS)  
IF YOU SET THIS TO 0, YOU TURN THIS AUTOMATIC FUNCTION OFF AND HAVE TO MANUALLY CONFIRM THE NEXT SHOOTER TO THE LINE WITH THE VALIDE BUTTON.

REPEAT DELAY

VALIDE

ONLY APPLICABLE IF YOU SET TWO TARGETS FROM THE SAME MACHINE. SETS THE TIME BETWEEN THE TWO TARGETS.  
DEFAULT: 30 = 3 SECONDS.

RADIO SENDER

VALIDE

URNS THE RADIO TRANSMITTER ON/OFF. IF THE TRANSMITTER IS TURNED OFF, THE DATEC WILL ONLY SEND SIGNAL VIA WIRE.

CHANGE RECEIVER

VALIDE

CHANGE RADIO CHANNEL BETWEEN 1-16

FO AND COMPAK

VALIDE

FOSSE OLYMPIQUE AND COMPAK MODE.  
SPECIAL MODE IF YOU HAVE A COMBINED FO AND COMPAK RANGE. IF TURNED ON, DATEC WILL ONLY SEND SIGNAL VIA WIRE ON ALL TRENCH DISCIPLINES AND ONLY SEND SIGNAL VIA RADIO ON COMPAK AND SPORTING DISCIPLINES.  
WHEN YOU USE FOR COMPAK MODE, THE DATEC SWAP SIGNAL OUTPUT FROM LAUNCHER 11 TO 6 AUTOMATICALLY.

SECURITY RADIO


VALIDE

TURN RADIO CODING ON/OFF. MAKE THIS DECISION BEFORE INSTALLATION. IF YOU CHANGE SECURITY MODE AFTER INSTALLATION, YOU HAVE TO REPROGRAM ALL RECEIVERS.  
DEFAULT: ON

RADIO MODE

VALIDE

CHANGE BETWEEN JPB RADIO AND PROMATIC. PLEASE BE AWARE THAT YOU CAN NOT MIX RADIO SYSTEMS ON ONE LAYOUT.

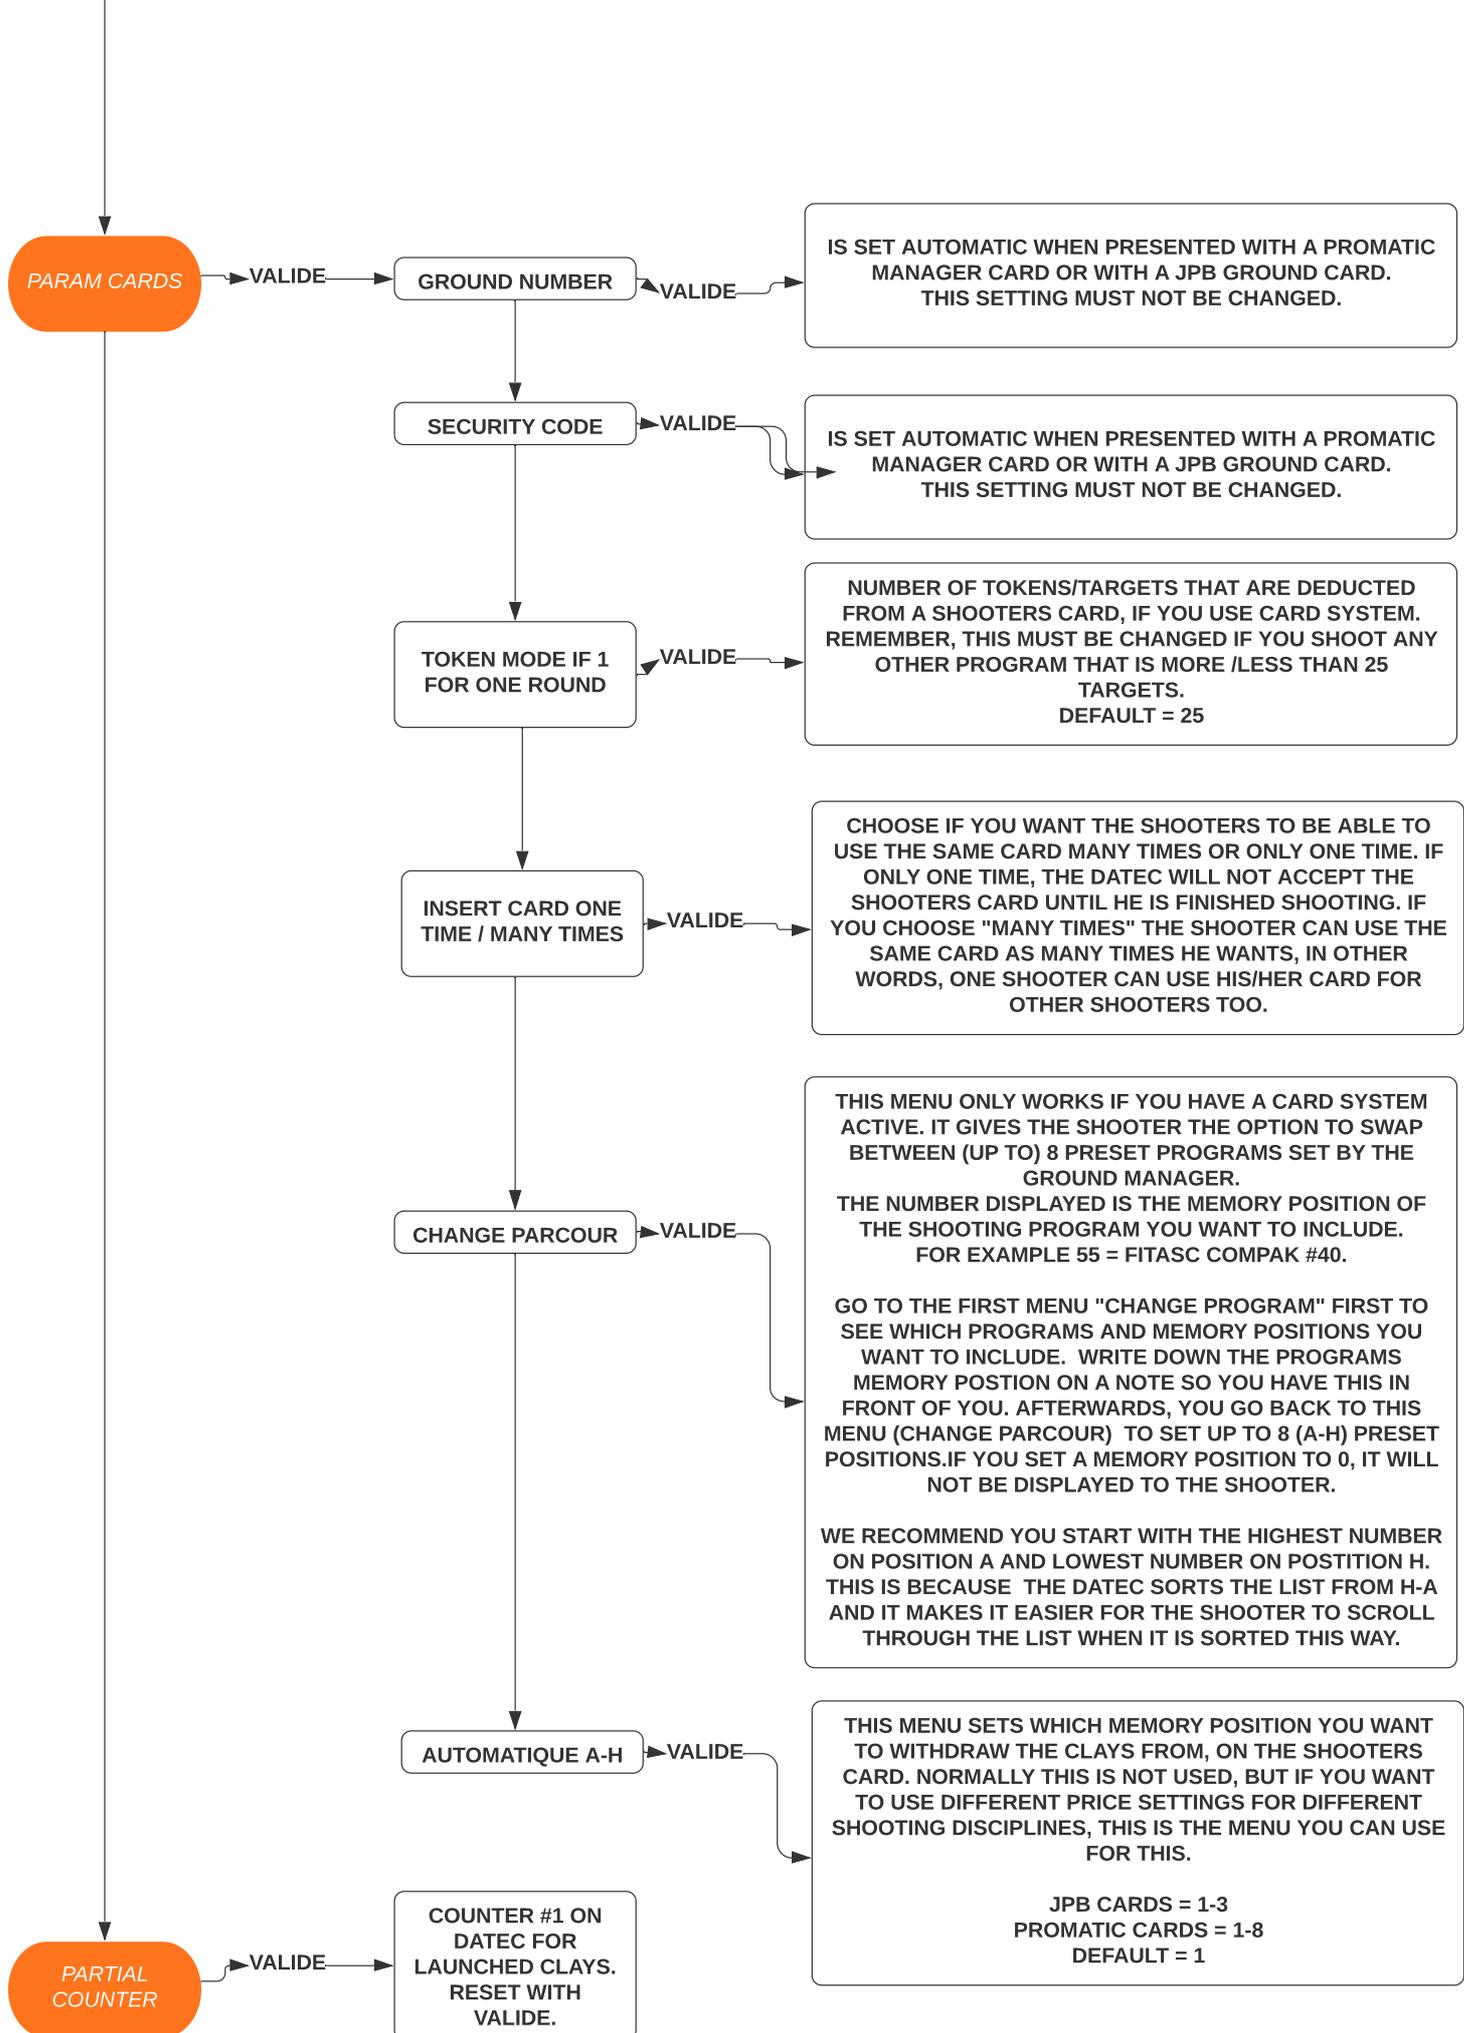

TOTAL COUNTER

VALIDE

COUNTER #2 ON DATEC FOR LAUNCHED CLAYS. RESET WITH VALIDE.

CHANGE PASSWORD

VALIDE

RESET PASSWORD WITH A NUMBER BETWEEN 1-255 TO HAVE MANUAL ACCESS TO THE DATEC WITHOUT A MANAGER / GROUND CARD. 0=PASSWORD OFF YOU HAVE TO RESTART DATEC TO RESET PASSWORD.

TIME TOKEN

VALIDE

CHANGE DATA OUTPUT FOR RS232 PORT. USE "CARD" FOR FITASC.EXE PROGRAM. USE "ETH" FOR BB232 PROGRAM. THE OTHER SETTINGS ARE FOR EXTERNAL TOKEN BOX. YOU HAVE TO RESTART DATEC TO TURN THIS CHANGE INTO EFFECT.

COMPAK ON LINE

VALIDE

TURN "ON" TO SET THE DATEC IN INLINE MODE INSTEAD OF SQUADED MODE.

LIMIT NO BIRD

VALIDE

SET THE MAXIMUM NUMBER OF NO-BIRDS AVAILABLE FOR EACH SHOOTER. NO-BIRDS ARE CALCULATED AS # OF SHOOTERS X LIMIT NO BIRD. EXAMPLE:  
5 SHOOTERS X 3 (LIMIT) = 15 NOBIRDS AVAILABLE  
  
25=FUNCTION TURNED OFF  
0=NO LIMIT AND AUTOMATIC VIEW OF FIRST TARGET IN COMPAK, IF THERE IS A SHOOTER MISSING ON THE STATION IN FRONT OF THE ACTIVE SHOOTER.

MANUAL NOBIRD

VALIDE


TURN ON / OFF TO ACTIVATE/DE-ACTIVATE THE NO-BIRD BUTTON ON THE DATEC. DEFAULT = FREE


CHANGE LANGUAGE


VALIDE

CHANGE MENU LANGUAGE BETWEEN ENGLISH AND FRENCH.

# PLEASE ONLY CHANGE SETTINGS UNDER SPECIAL OPTIONS WHILE CONSULTING A DATEC TECHNICIAN.

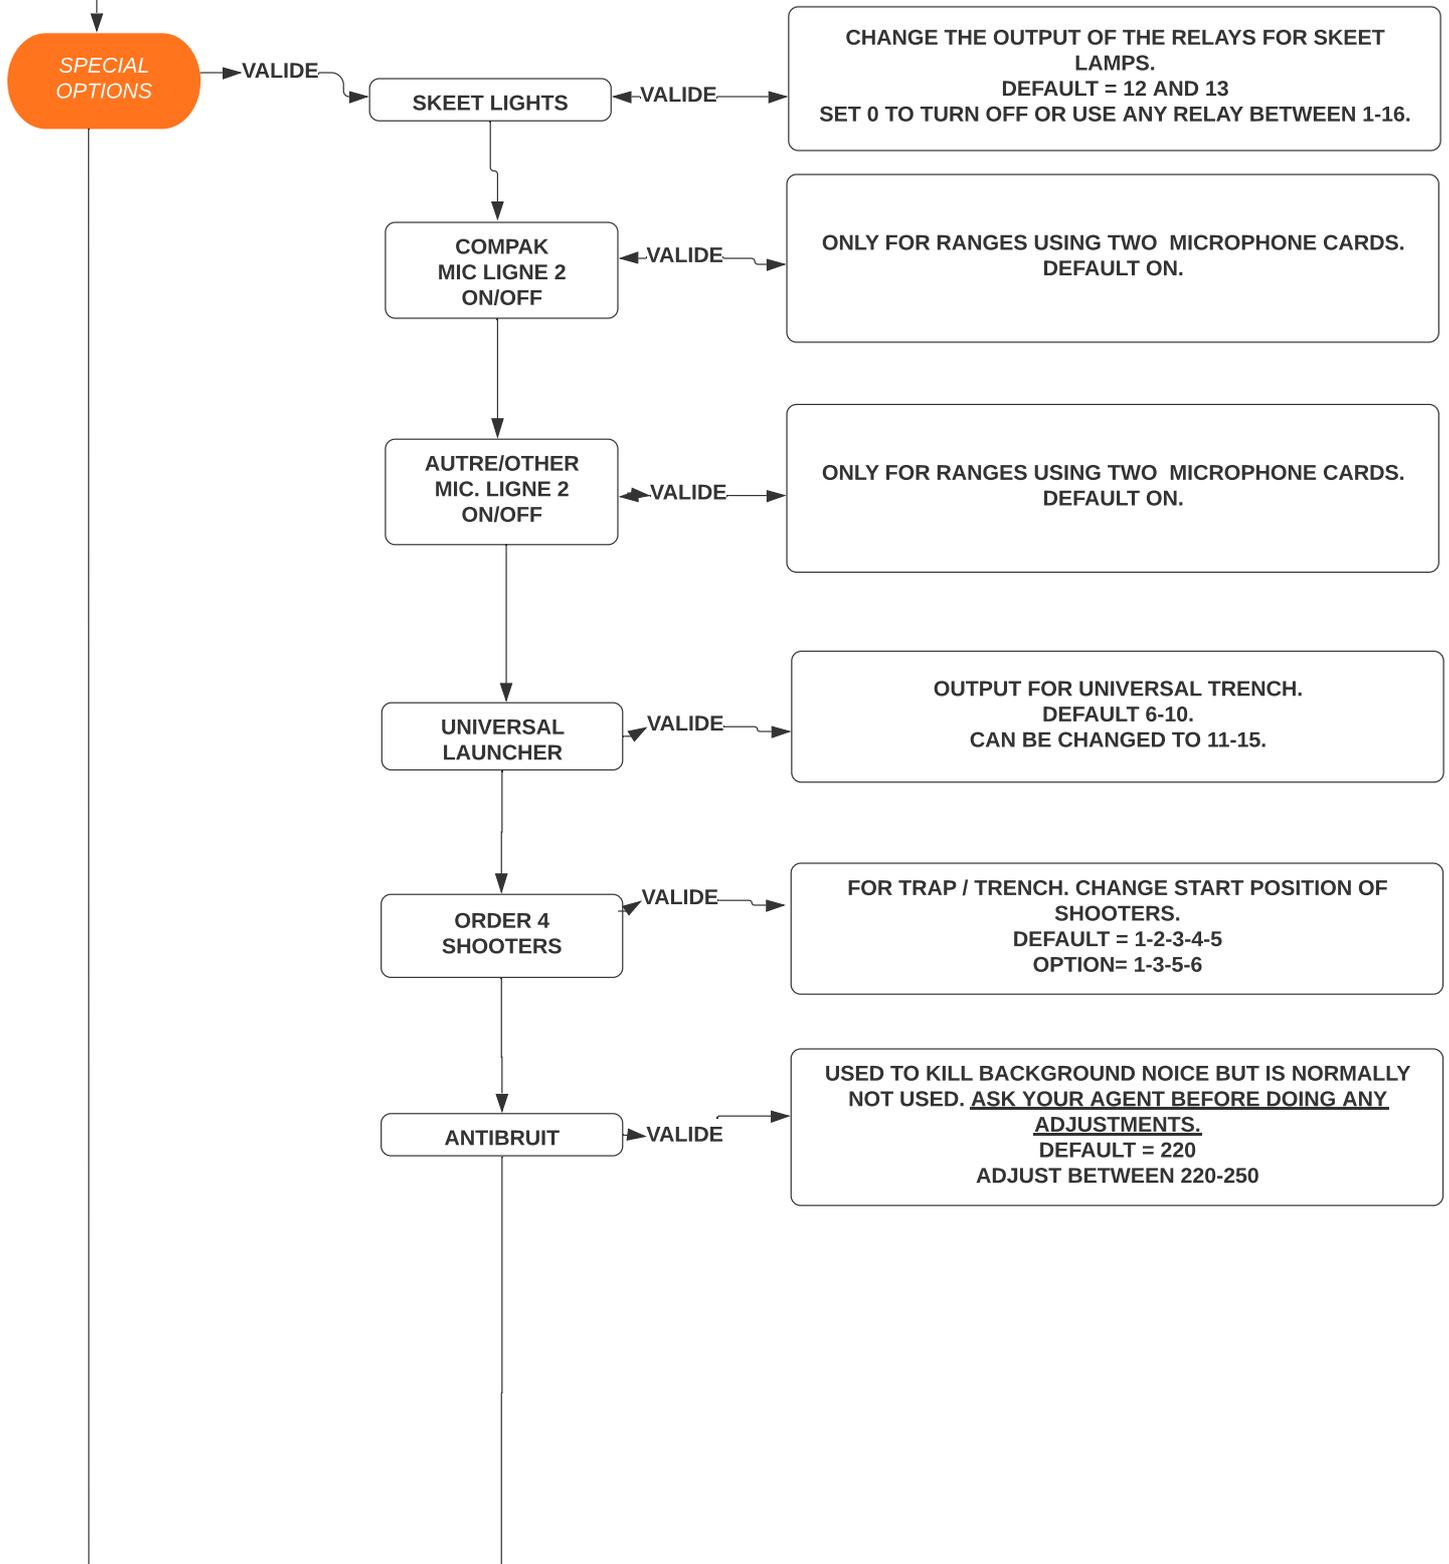

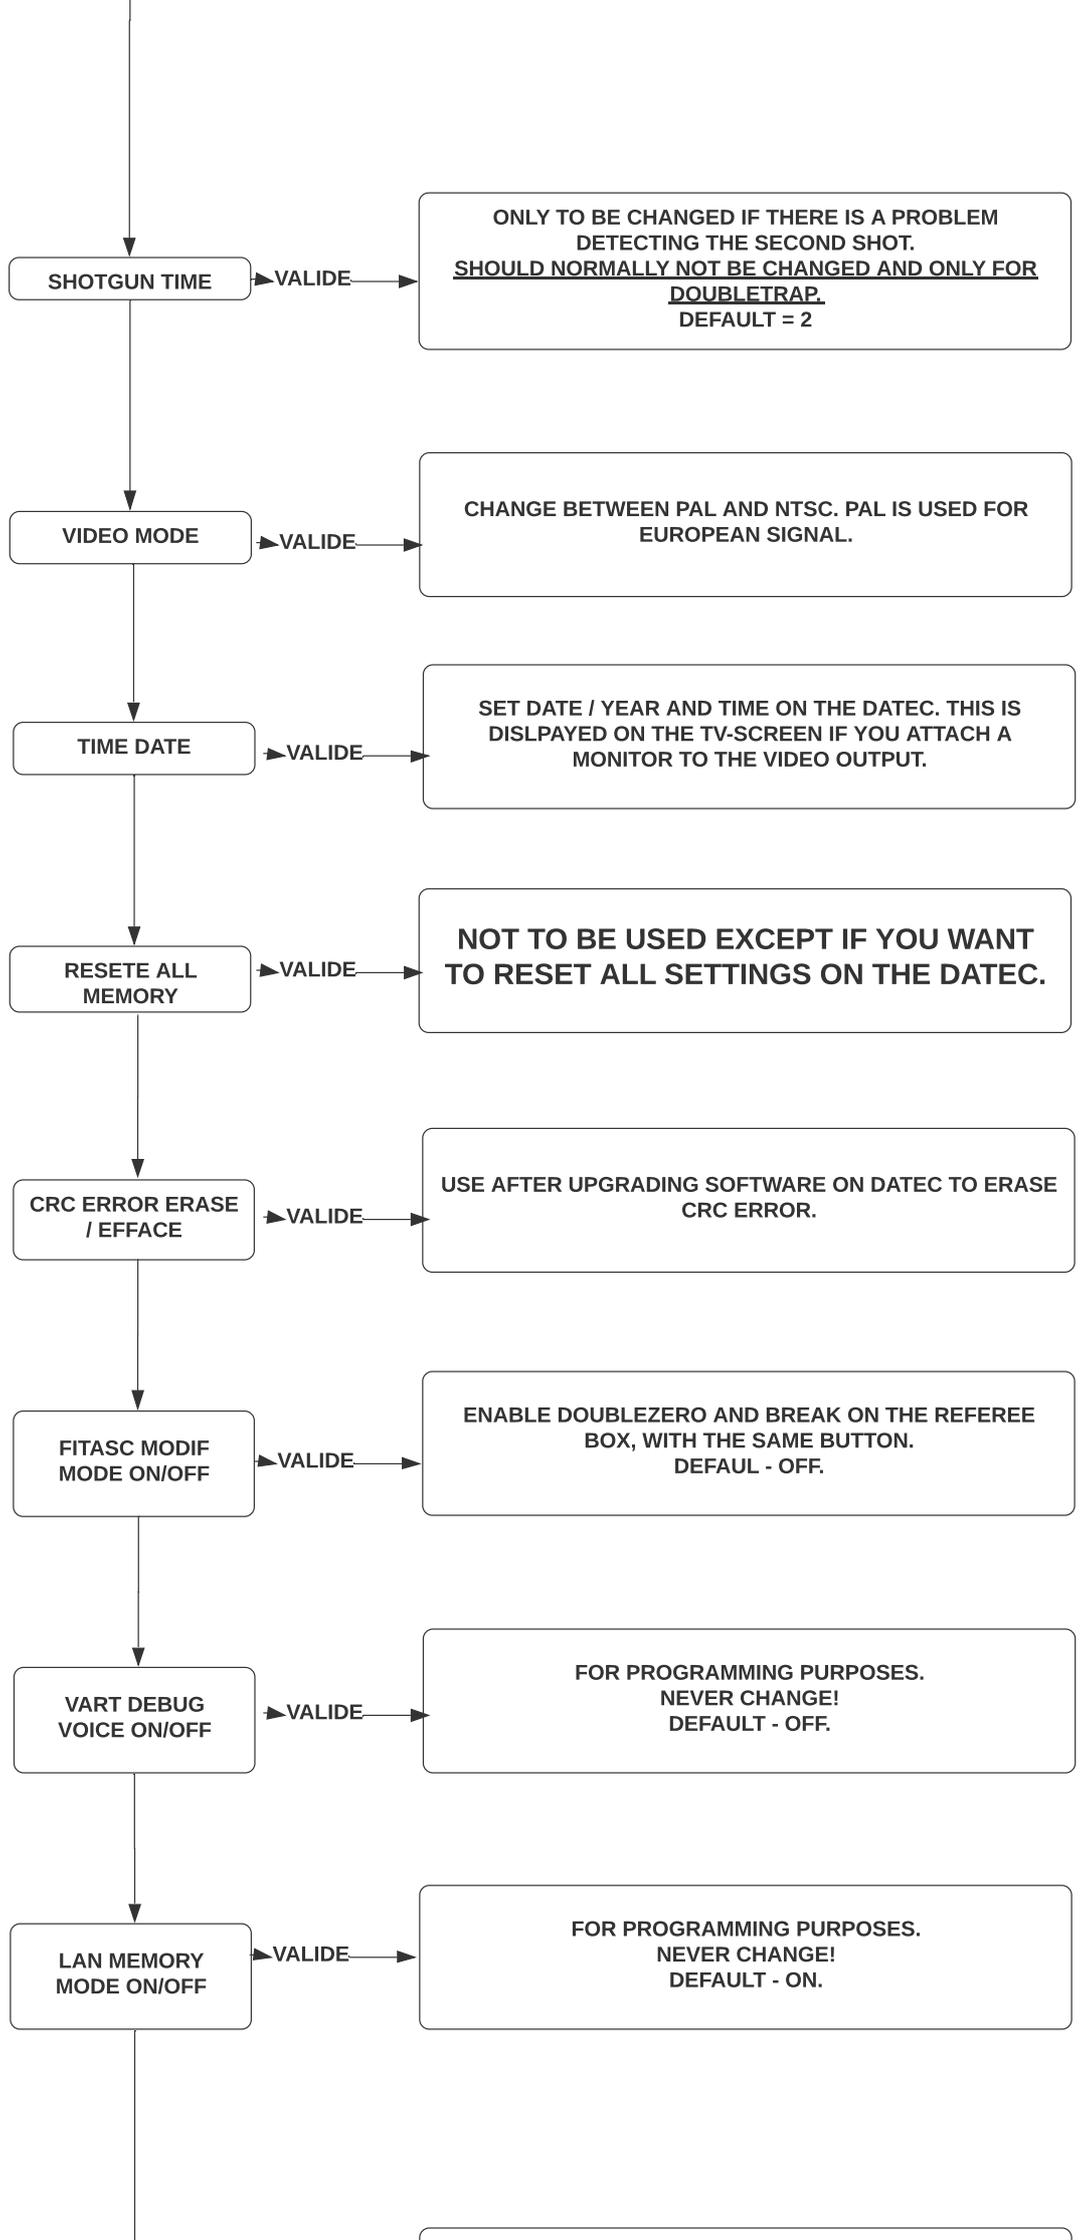

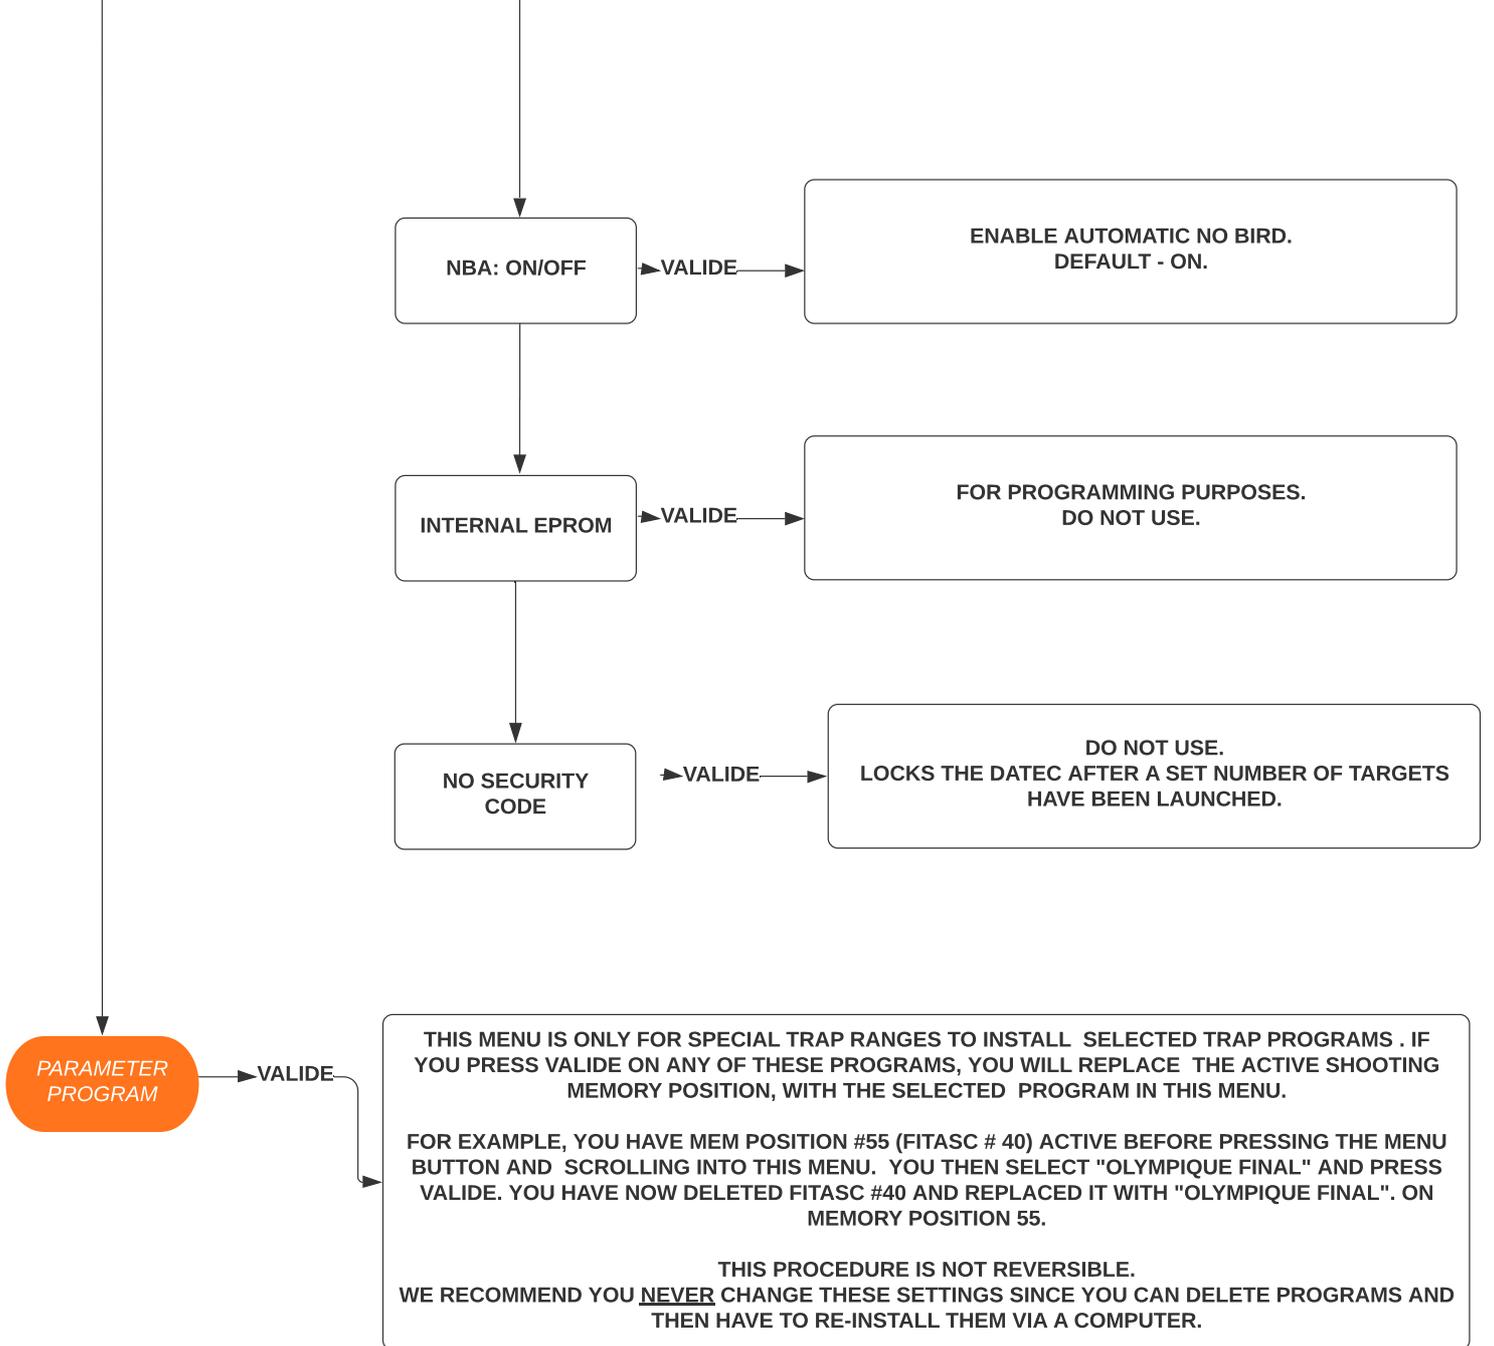

© Per Magnus Pedersen / Jæger og Hund AS  
 Gamle Hallingdalsveien 105  
 3534 Sokna  
 + 47 93 24 97 29  
 www.jegeroghund.no  
 post@jegeroghund.no

