

## Baron (Datec) System

The system will be pre-programmed and ready to start

### To Start

- 1a) Show the single targets from the handset A – F on completion, say, '**competition**'
- 2b) Press the 'No Target Button to start, To turn off Pause mode.

### Referees Hand Control

- 2) There are two (2) 'Zero' Buttons next to each other Zero 1 & Zero 2 the third button often on the top of the controller, is for 'No Target'
- 3) To Stop/Pause the system, (malfunction or trap problem) Press and Hold the 'No Target' button for 3 seconds, to resume, press and release the 'No Target Button'

### Caution

If there is a problem at position 5 with the last double;

### **DO NOT PRESS PAUSE**

This will prevent a return to extension 5. If a problem arises in this situation, you will need to keep the system online whilst you deal with the issue; so please bear in mind that the microphone on the **next post** will be **ACTIVE**. Then press No Target Button if need.

### To Finish/End

When the last competitor has completed position one (1) and moves to position 2; after position five (5) completes their last single target, the position lamp will again illuminate in **position one (1)** (this position is now vacant):

On the computer controller, press the menu button & scroll using the + advance button until the controller screen reads End Sequence (words to that effect), normally it takes four (4) presses to come to the End Sequence message, now press the **VALIDATE** button.

The light should move from position 1 to position 2 and the system knows the line is finishing.

### Removing an Absent Shooter

When there is an absent shooter, and the light is on at position one (1), check the electronic screen and confirm the absent shooters number is showing in position one (1) Press the **RED** button once, the screen asks to confirm Press the **RED** button again, the system will now cycle to the next shooters number.

If you've forgotten to do this, as soon as the indicator light on the machine (1) comes on, you'll need to pull out this slider to correct the display.

Don't worry about the clays that have been pulled out, as they'll be set correctly and can't change.

### Datec (Baron) System Controller

BARONSA WIFI - Jean-Pierre BARON - Tél : (+33) 6 09 23 13 14 - Mail : jpb@baronsa.fr  
<https://www.baronsa.fr>

